


NASP USB Drivers

Before using the scanner to scan NASP forms you may have to install USB drivers. The Apperson scanners use the Si Labs USB drivers which can be found here:

https://apperson.com/updates/Drivers/CP210x_Windows_Drivers.zip

Installing the Drivers

After downloading the file from the site above unzip the archive to extract the files to your computer. Look inside of the extracted archive to find the CP210x_VCP_Windows folder where you will find the CP210xVCPInstaller_x64.exe and CP210xVCPInstaller_x86.exe files.

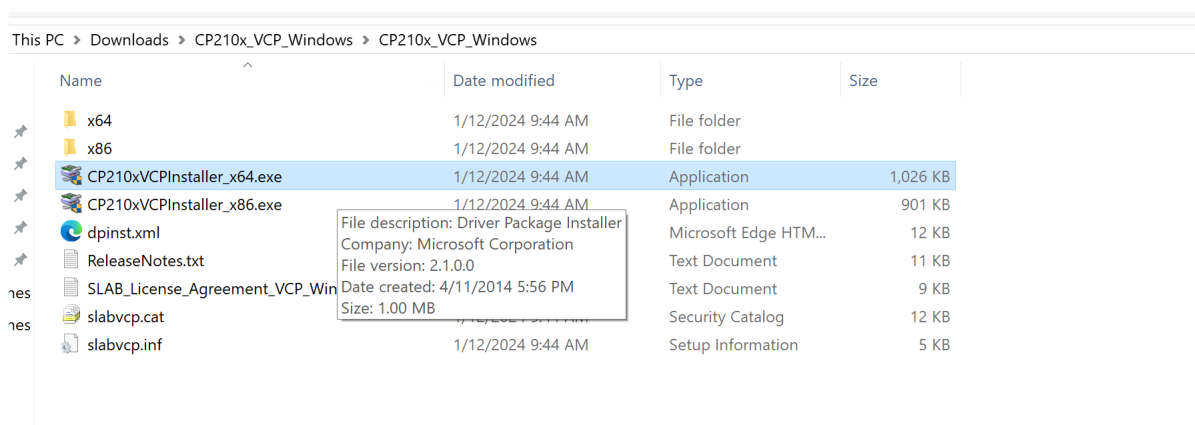

If you have a 64 bit version of Windows double-click the CP210xVCPInstaller_x64.exe file and follow the prompts. If you have a 32 bit version of Windows double-click the CP210xVCPInstaller_x86.exe file and follow the prompts. If you don't know then start with the 64 bit version, if you receive an error message then try the CP210xVCPInstaller_x86.exe file.

As part of the installation, you may be prompted to allow changes to your computer. Choose Allow if you see a prompt. During the installation you may be asked to enter an Administrative user name and password. If prompted, please enter this information to allow installation. Follow the prompts and you will be finished with installation in a minute or two.

After installation connect the scanner to your computer and run the NASP software. Your scanner should connect and allow you to scan the forms.